

How do I clear the memory on my Feather-Lift™ control paddle?

Last Modified on 04/18/2019 10:20 am CDT

To clear storage settings, press and hold M button for 8 seconds until CLR displays.
